




TUMBLE DRYER  
SECHE-LINGE  
WÄSCHETROCKNER  
TROMMELDROGER  
TCE 7276

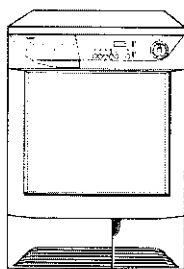

- (GB) ⚠ **Unpacking:** see page 5  
(F) ⚠ **Débridage:** voir page 18  
(D) ⚠ **Entfernen der Transportsicherung:** s. S. 29  
(NL) ⚠ **Uitpakken:** zie blz. 41

INSTRUCTION BOOKLET  
MODE D'EMPLOI  
GEBRAUCHSANWEISUNG  
GEBRUIKSAANWIJZING



## Dear customer,

Please read these operating instructions carefully and pay particular attention to the safety notes indicated in the first pages.

We recommend that you keep this instruction booklet for future reference and pass it on to any future owners.

## Transport damages

After unpacking the machine please check it is not damaged. If in doubt, do not start it but contact your local Service Centre.

*The symbols you will see on some paragraphs of this booklet have the following meaning:*



The warning triangle emphasize information that is particularly important for your safety or correct functioning of the appliance.



The information marked with this symbol provides additional instructions and practical tips on the use of the appliance.



Tips and information about economical and ecological use of the machine are marked with this symbol.

*Our contribution to the protection of the environment: we use recycled paper.*

## Contents

<b>Important safety information</b> .....	3	<b>Use</b> .....	7
<b>Disposal</b> .....	3	• The control panel .....	7-9
<b>Tips for environmental protection</b> .....	4	• Programme chart .....	10
<b>Technical specifications</b> .....	4	• Operating sequence.....	11
<b>Description of the appliance</b> .....	4	• Useful hints .....	12
<b>Adjusting the level of conductivity</b> .....	5	<b>Maintenance and Cleaning</b> .....	13
<b>Installation</b> .....	6	• External cleaning .....	13
• Unpacking .....	6	• Cleaning the door .....	13
• Positioning .....	6	• Cleaning the filters .....	13
• Electrical connection .....	6	• Cleaning the condenser unit .....	13
• Stacking kit .....	6	• Emptying the water reservoir .....	14
• Door reversal .....	6	• Cleaning the air intake grille.....	14
		• Cleaning the drum .....	14
		<b>Something not working?</b> .....	15



## Important safety information

*These warnings have been provided in the interest of safety. You **MUST** read them carefully before installing or using the appliance.*

### Installation

- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.

### Use

- This appliance is designed for domestic use only. If the machine is used for any other purposes or is not used correctly, the manufacturer accepts no responsibility for any damage that might occur.
- Always unplug the appliance after use.
- Clothes which are dripping wet should not be placed in the dryer.
- Danger of explosion:** Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substances are volatile, they could cause an explosion. Tumble dry only items washed with water.
- Please make sure that no gas lighters have accidentally been left in pockets of garments to be loaded into appliance.
- Do not dry canvas shoes or sports shoes, as they could get stuck between the door and the drum, thus blocking this latter.
- Leave the door slightly ajar when the appliance is not being used. This will allow the seal to be preserved.
- Clean fluff filters after using the tumble dryer. To prevent fire risks, **do not use the appliance if the fluff filters are damaged or without filters.**
- Do not allow fluff to accumulate around the dryer.

### General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.


### Child safety

- Children are often not aware of how dangerous electrical appliances can be. When the machine is working, children should be carefully supervised and not be allowed to play with the appliance.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach.
- Make sure that children or pets do not climb into the drum.
- When the appliance is to be scrapped, cut off the electrical supply cable and destroy the plug with the remaining cable. Disable the door catch in order to prevent children from becoming trapped inside while playing.



## Disposal

### Packaging materials

The materials marked with the symbol  are recyclable.

This means that they can be recycled by disposing of them properly in appropriate collection containers.

### Machine

Use authorised disposal sites for your old appliance. Help to keep your country tidy!



## Tips for environmental protection

To save energy and to help protect the environment, we recommend that you follow these hints:

- Try to load the maximum capacity of the machine as small loads are **uneconomical**.
- Always load well spun laundry. The higher the spin speed, the lower the electricity consumption and the shorter the drying times.
- Do not over-dry laundry, this avoids creasing and saves energy.  
Select the drying programme according to the type of laundry and the required degree of dryness.

- To utilize the maximum load, laundry which is to be dried ready to put away (store dry) can be dried together with items to be ironed. To do this, select the programme for iron-dry, remove the iron-dry items at the end of the programme and then finish-dry the rest of the load.
- Clean the filters regularly to avoid excessive drying times and high electricity consumption.
- Ventilate the room well. The room temperature should not exceed +35°C during drying.

## Technical specifications

DIMENSIONS:	Height	85 cm
	Width	60 cm
	Depth	58 cm
ELECTRICAL CONNECTION:		220/230 V/50 Hz
MAX. POWER ABSORBED:		2400 W
MIN. FUSE RATING:		16 A
MAX. DRYING CAPACITY:	Cotton, linen	5 kg
	Synthetics	2.5 kg
CONSUMPTION:	Cotton, linen	3.64 kWh (5 kg store dry)
	Cotton, linen	3 kWh (5 kg iron dry)
	Synthetics	1.4 kWh (2.5 kg store dry)




This appliance complies with the following E.E.C. Directives:

- 73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications;
- 89/336 EEC of 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications.

## Description of the appliance

- 1 Control panel
- 2 Water reservoir
- 3 Fluff filters
- 4 Rating Plate
- 5 Consenser Unit
- 6 Adjustable feet

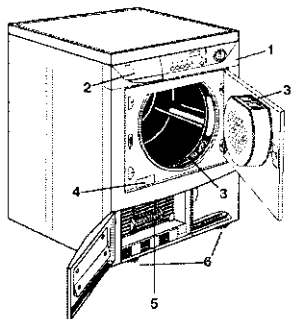

# Adjusting the level of conductivity

Water contains, a variable quantity of limestone and mineral salts of which quantities vary according to geographical locations thus varying its conductivity values.


Relevant variations of the conductivity of the water compared to those prefixed by the factory could slightly influence the residual humidity of the laundry at the end of the cycle.

Your dryer allows you to regulate the sensitivity of the drying sensor based on conductivity values of the water by using the following procedure.

## Procedure:


Turn the programme selector dial to switch on the appliance

In selection mode press simultaneously the buttons 3 and 6 until «CD» appears on the digits.

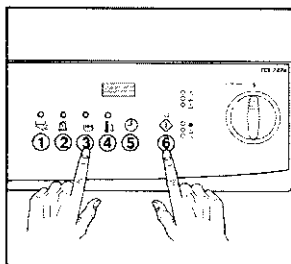

## Adjusting the level of conductivity:

Press the button 5 sequentially: the level of conductivity is indicated by the lighting of the horizontal hyphens.

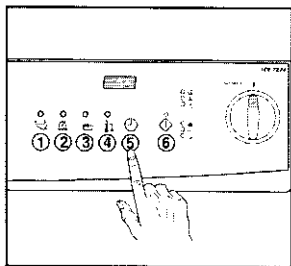

Display	Conductivity degree	Approximative value (µS/cm)
CD _	Low	< 300
CD =	Medium	300 - 600
CD ≡	High	> 600

Normally, the appliance is factory-set to the highest level; however, certain models may be configured differently.

## Memorizing the new setting:


Simultaneously press down the buttons 3 and 6 until the previous drying cycle time appears again on the display and the buzzer sounds.

# Installation

## Warning!

### Unpacking

- ⚠ Slide out the polythene bag with the polystyrene stuffing before using the appliance.

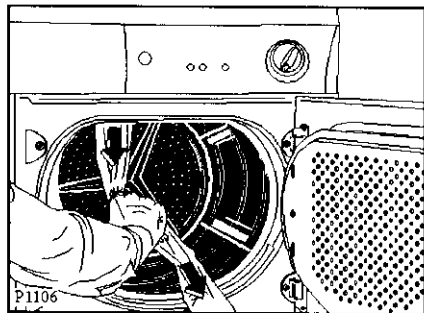

- ⚠ Should the appliance be moved, it must be transported vertically.

### Positioning

It is recommended that, for your convenience, the machine is positioned close to your washing machine.

The tumble dryer must be installed in a clean place, where dirt does not build up.

Air must be able to circulate freely all round the appliance. Do not obstruct the front ventilation grille or the air intake grille at the back of the machine.

To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is.

**The feet must never be removed.**

**Do not restrict the floor clearance through deep-pile carpets, strips of wood or similar. This might cause heat build-up which would interfere with the operation of the appliance.**

### Important

The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures.

When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance.

### Electrical connection

This machine is designed to operate on a 220-230 V, single-phase, 50 Hz supply.

Check that your domestic electrical installation can take the maximum load required (2.4 kW), also taking into account any other appliances in use.

Connect the machine to an earthed socket, in accordance with current wiring regulations.

- ⚠ **The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre.**


### Important!

The power supply cable must be accessible after installing the machine.

### Stacking kit

A special stacking kit is available through your dealer, to enable the mounting of the dryer on top of a front loading washing machine with cover's depth between 48 and 60 cm.

Read carefully the instructions supplied with the kit.

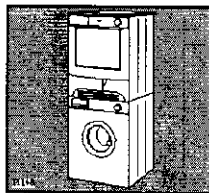

### Door reversal


To make it easier to load or unload the laundry the door can be reversed.

**This operation must be carried out by qualified personnel.**

Please contact the nearest Service Centre.

# Use

## The control panel

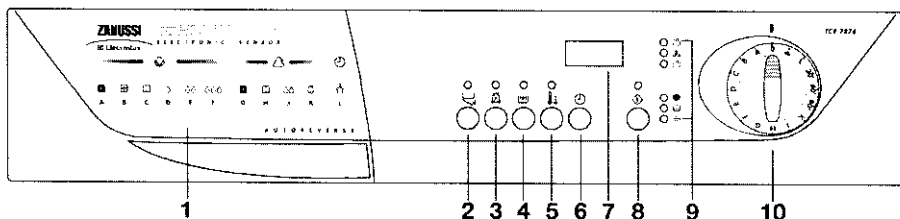

### 1 Programme guide

This will help you to select the correct programme for drying.

### 2 DOOR OPENING button

Press this button to open the door. The light above the button will light up.

**Opening the door by means of this button is possible only if the tumble dryer is on (programme selector dial set to a programme or drying time).**

If you open the door during a programme, in order to restart the programme you must re-press the START/PAUSE button again after having closed the door.

### 3 Buzzer OFF button

A buzzer sounds

- when selecting the programme
  - when depressing the buttons
  - when an incorrect option selection is made
  - when the programme selector dial is turned to another position during the programme or when you depress an option button during the cycle
  - at the end of the programme
  - when the water reservoir is full
  - if the machine is not working correctly
  - when the small door at the bottom is open
- By depressing button the acoustic signal is switched off.

The corresponding light comes on.

### 4 Quick drying button

By depressing this button the drying time is reduced in the following COTTON programmes:

- extra dry
- ready to wear
- store dry

The corresponding light illuminates. This option **cannot** be selected together with "low temperature" function.

### 5 Low temperature button

Pressing this button allows drying to be performed at a lower temperature, for delicate items.

The corresponding pilot light comes on.

This option can also be used for time controlled drying. This function **cannot** be used with QUICK DRYING.

### 6 DELAYED START button

This button allows you to delay the starting of the programme by 12 hours max.

This option must be selected **after** having selected the programme and **before** pressing START/PAUSE to start the programme.

Every time the button is pressed, the time is increased by 30 minutes, until the display shows a delay of "2 hours". After this, the delay is displayed hour by hour.

The minutes or hours of delay that have been selected are displayed for 2 seconds, then the display shows the duration of the previously selected programme.

The countdown begins after you have pressed the START/PAUSE button.

To cancel the delay time press the DELAYED START button until the display indicates 0'h. Then press the START/PAUSE button again.

When the delay is cancelled, the display shows the duration of the programme.

During the delayed start, it is not possible to change the programme or the delay time that have been selected. To do this, you must first switch off the machine by setting the programme selector dial to "0". Select the new programme, the options and the delayed start, then press the START/PAUSE button.

To cancel or change options that have been selected, simply set the appliance to PAUSE. Once you perform the desired operation, press once again the START/PAUSE button.

If you wish to add more laundry while the machine is performing the countdown, simply open the door. When you close the door, press the START/PAUSE button again to cause the countdown to be resumed.


## 7 DISPLAY

The display shows the following information:

- duration of selected programme
- delayed start
- end of programme
- incorrect option selection
- alarm code

### • Duration of selected programme

After you have selected the programme, its duration (in hours and minutes) appears on the display. It is calculated automatically on the basis of the maximum load accepted for each type of fabric and of the required degree of drying.

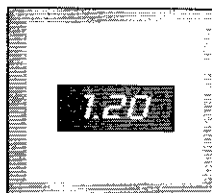


When the programme starts, the remaining time is displayed every 5 minutes.

### • Delayed start

If you have selected a delay time by means of the relevant button, the display shows it for 2 seconds; then it shows the duration of the previously selected programme.

The countdown is displayed every 30 minutes until it displays "90 minutes" and then hour by hour.

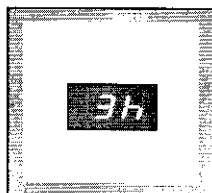


### • End of programme

A flashing zero indicates the end of the programme and it is displayed after the "anti-creasing" phase.



### • Incorrect option selection


If you select an option that is not compatible with the programme you have selected, the display shows **Err** (error).

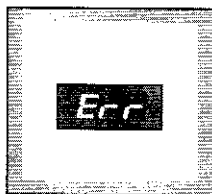

This code will reappear during the execution of the programme if you press one of the option buttons or turn the programme selector.

### • Alarm code

In case of a functional anomaly, the display shows an alarm code (e.g. **E21**). See page 14 for more detailed information.

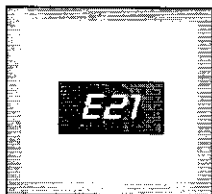




## 8 Start/Pause button

Press this button to start the dryer after having selected the programme and the options. The relevant light will stop flashing. If you have chosen a delayed start, the machine will begin the countdown.

**If the door of the appliance or the small door at the bottom is opened while the programme is running, this button must be pressed again after closing the door in order to restart the programme from the point at which it was interrupted.**

This button must be depressed also after a power failure and after having re-inserted the water reservoir, if it has been emptied in the middle of a programme after lighting up of light . In both cases the light of the Start/Pause button flashes to remind you that the start button needs to be pressed again.

## 9 Indicator lights

These lights indicate the following functions:

### "Drying" light

This light indicates that the appliance is in the drying phase.

### "Cooling" light

This light indicates that the appliance is in the cooling phase. At the end of drying, there is a 10 minute cooling phase to cool the laundry.

### "End of programme" light

This light is on at the end of the cooling phase, during the anti-creasing phase and at the end of the programme.

## "Filter cleaning" light

This light illuminates at the end of the programme to remind you that the filters must be cleaned.

## "Water reservoir full" light

This light comes on at the end of the programme to remind you that the water reservoir must be emptied out. If this light illuminates during a programme this means that the water reservoir is full. The buzzer sounds, the programme stops, the light of the Start/Pause button flashes.

## "Condenser cleaning" light

It comes on every 80 cycles to remind you that the condenser must be cleaned.

## 10 Programme/Time selector dial

Allows you to select electronically controlled or time controlled drying.

Turn the dial to the required programme or time.

### Electronically controlled drying (automatic)

The appliance runs these programmes with the help of probes which detect the degree of dampness of the laundry.

Simply select the programme according to the type of laundry and degree of drying required.

### Time controlled drying



 










Can be used to finish off drying if necessary. Select the 90 or 60 minute programme for cottons or the 30 minute programme for synthetics.

  To cancel a programme which is running, turn the programme selector dial to "0".

At the end of drying, turn the selector dial to "0" to switch the machine off before removing the laundry.

## Programme chart




### Automatic drying (electronic programmes)

Type of laundry	Degree of drying required	Max-load <sup>(*)</sup>	Programme
Cotton & linen 	extra dry 	5 kg	A
	ready to wear 	5 kg	B
	store dry 	5 kg	C(*)
	slightly damp 	5 kg	D
	iron dry 	5 kg	E(*)
	machine iron dry 	5 kg	F
Synthetics 	extra dry 	2.5 kg	G
	store dry 	2.5 kg	H(*)
	iron dry 	2.5 kg	J
Jumpers	Baby cycle 	1 kg (10 jumpers)	K
Jackets, trousers, dresses, skirts.	Dry fresh 	1 - 4 garments	L

(\*) According to IEC 61121 Standards.

- Baby cycle "K" is a special programme for jumpers to be dried "ready to wear".
- Dry fresh "L" is designed to clean and freshen garments labelled "dry clean only" at home, in your tumble dryer, using the special product available on the market.

### Time controlled drying

Type of laundry	Drying time	Max-load <sup>(1)</sup>	Programme selector dial position
Cotton 	90 min	5 kg	90°
Cotton 	60 min	5 kg	60°
Synthetics 	30 min	2.5 kg	30°

(1) Never overfill the drum (do not load large quilts, for example).

Drying times vary according to:

- The type of laundry
- The size of the load
- The degree of spinning prior to drying.

### Fresh & Cool

This position on programme selector dial can be used to freshen the laundry (e.g. to remove a persistent odour of moth-balls). Programme duration 10 mins.

### Load

It is often difficult to estimate the weight of items to be dried. We therefore recommend that you adopt the following guidelines:


- **cotton, linen:** drum full but not too tightly packed;
- **synthetics:** drum no more than half full;
- **delicate fabrics:** drum no more than one third full.


 
 






## Operating sequence

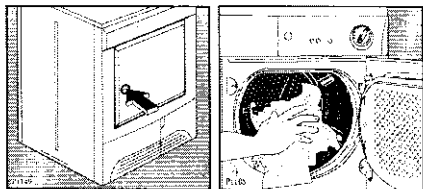Before using your tumble dryer for the first time, we recommend to place a few damp cloths inside the appliance and dry for 30 minutes. There may be dust inside a brand new tumble dryer.

### Drying


1. Connect the appliance.
2. Open the door (see picture).



3. Load the items one at a time, shaking them out loosely.
4. Close the door. Please check the laundry does not get caught between the door and filter.
5. Select the drying programme or time. The lights ,  and  come on. The light of the START/PAUSE button flashes and the display shows the duration of the programme.
6. If required, press the low temperature button  and/or the buzzer OFF button  or the QUICK drying button .
7. Select the DELAYED START  if required. The selected delay appears on the display for 2 seconds, then the duration of the selected programme is displayed.
8. Press the Start button : the corresponding light stops flashing and drying starts. Only the light  remains lit. If you have selected the delayed start, the machine begins its countdown.

If the programme selector dial is turned to another position, when the machine is running, the buzzer will sound, the programme phase indicator lights will flash and **Err** appears on the display.

The drum turns alternately in both directions during drying.



 
All drying programmes end with a 10 minute cooling phase (light  is on).

You may remove the laundry after this phase.

The lights ,  and  illuminate.

The display shows a static zero.

9. If the laundry is not removed at the end of the cycle, the dryer performs an **anti-creasing** phase (duration: 30 minutes maximum).

If you do not remove the laundry, the dryer will stop automatically at the end of the anti-creasing phase. Lights ,  and  remain lit and the buzzer sounds every 10 seconds for 2 minutes.

The light of the START/PAUSE button goes off and a flashing zero appears on the display.

10. Turn the programme selector dial to "0": all the lights go out. The appliance is switched off.




Remove the laundry.

**If you open and then close the door before turning the selector dial to "0" all the lights corresponding to the phases making up the performed programme come on and the display shows the duration of the programme.**


### After each use

- Clean the filters (see page 13).
- Empty the water reservoir (see page 14).

### Important!

If the drying programme has to be stopped before it reaches the end, we recommend that you turn the programme selector dial to position  and wait until the end of this cooling phase before removing the laundry. This will avoid a build-up of heat inside the appliance. To do this first turn the dial to "0" and then to  and depress Start button .





### Modifying the programme

To change a programme which is running, first cancel it by turning the programme selector dial to "0". Select the new programme and press the Start button .

## Useful hints

- Try to load to the maximum capacity of the machine as small loads are uneconomical. For information, here is a list of the average weights of some common laundry items.

Sheet	700 - 1000 g
Tablecloth	400 - 500 g
Kitchen towel	70 - 120 g
Table napkin	50 - 100 g
Towelling hand towel	150 - 250 g
Bathrobe	1000 - 1500 g
Man's shirt	200 - 300 g
Pillowcase	100 - 200 g
Man's pyjamas	400 - 500 g
Ladies' nightdress	200 - 250 g

- Never tumble dry the following:  
Particularly delicate items such as net curtains, woollen, silk, fabrics with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam.
- Always follow the instructions on garment labels:
  -  may be tumble dried
  -  normal drying (high temperature)
  -  delicate drying (low temperature)
  -  do not tumble dry
- Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them. Close press studs, zips and hooks and tie belts and apron strings.
- Sort laundry according to type and degree of drying required.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract the fluff.
- The laundry must be thoroughly spun before tumble drying.
- Easy-care items**, too, e.g. shirts, should be briefly pre-spun before drying (depending on crease resistance approx. 30 seconds or using the special brief spin programme of your washing machine).
- Knitted textiles (knitted underwear) may shrink a little during drying. Please do not overdry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can also put starched items into your dryer. However, to achieve the desired starched effect, choose the programme "iron dry". To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- If individual items are still damp after drying, set a brief post-drying time, but **at least 30 minutes**. This will be necessary particularly for multilayered items (e.g. collars, pockets, etc.).

# Maintenance and Cleaning

You must **disconnect** the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.


## External cleaning

Use only soap and water and then dry thoroughly.

**Important:** do not use methylated spirit, diluents or similar products.

## Cleaning the door

Clean periodically the interior part of the door to remove any fluff from the seals around the filter. Accurate cleaning ensures correct drying.

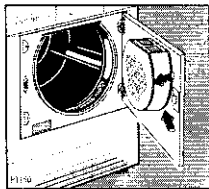


## Cleaning the filters

Your dryer will only function well if the filters are clean.

The filters collect all the fluff which accumulates during drying and they must therefore be cleaned **at the end of each programme**, before removing the laundry, with a damp cloth.


The light ● is on to remind you this operation.

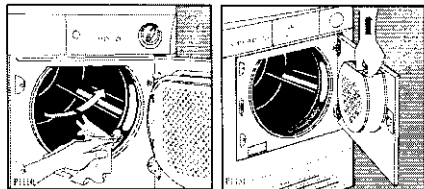

The filter in the inner door must be removed for cleaning.

Do not be alarmed by the amount of fluff. It is not due to excessive wear caused by the dryer. All fabric loses fluff when drying but it goes un-noticed in the air. In a tumble dryer it simply collects in the filter.

After a while, a whitish patina due to detergent residue on laundry forms on the filters. When this occurs, clean the filters with warm water using a brush. Remove the filter in the door opening as per picture (it can be positioned with the tooth facing to the left or to the right).

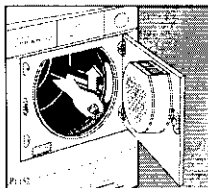


**Do not use the appliance without filters.**

## Cleaning the condenser unit


Clean the condenser when light ⇨ comes on.

The condenser is situated at the lower part of the cabinet behind a small door. To open the door, push the catch as per picture.

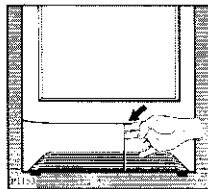


During the drying cycle or at the end, it is normal for water to be present on the surface of the condenser insertion.

To pull out the condenser, first turn the two red stops downwards and then remove the condenser unit holding it at the handle.

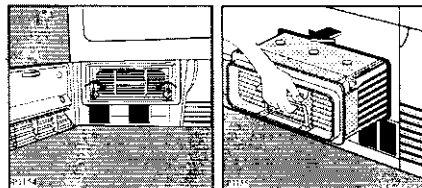

Clean it with a brush and rinse it under the shower if necessary.

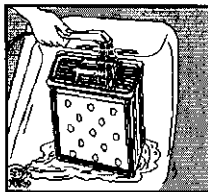

Also clean the outside, removing all fluff.

Clean the rubber seal round the condenser cabinet and in the inner part of the small door with a damp cloth.


**Important!** Do not use pointed objects or utensils to clean the spaces between the plates, as this could damage the condenser and make it permeable.

Re-fit the condenser, turn the red stops upwards and close the door.





**Do not use this appliance if the condenser has not been fitted.**

### Emptying the water reservoir


Water extracted from the laundry condenses inside the machine and is collected in a reservoir. The reservoir must be emptied **after each drying cycle** to ensure efficient operation when the machine is next used. The pilot light  reminds you this operation.


Proceed as follows:

- Pull out the reservoir
- Turn it upside down and let water flow down
- Re-fit the reservoir

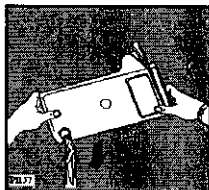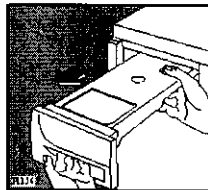

**The reservoir must be re-inserted correctly.**

  
If this is not done the pilot light  comes on during next drying and the programme stops, leaving the laundry damp. The buzzer will sound.

After emptying and inserting the reservoir the START-button  has to be depressed again to allow the programme to continue.

**Handy tip:** The condensed water may be used in a steam iron or to top up a battery, etc. In this case it must be filtered (e.g. through a coffee filter).

### Cleaning the air intake grille

Using a vacuum cleaner remove the fluff from the air intake grille at the back of the appliance.

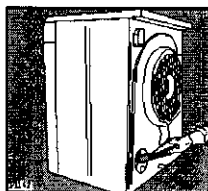

### Cleaning the drum


When your laundry does not reach the desired degree of dryness, in other words, when it turns out either too dry or too damp, we advise you to clean the inside of the drum with a cloth soaked with vinegar.




This will eliminate the slight patina that has formed in the drum (due to residues of detergent and softeners used in the washing, and to the lime contained in the water), which prevents the probes from detecting the correct degree of dryness.

## Something not working?

Before contacting your local Service Centre, please make the following checks.

### Important!

If light  flashes, the buzzer sounds and an alarm code is displayed, switch the machine off and call the Service Centre.

Problem	Possible cause
<ul style="list-style-type: none"><li>• The dryer does not work:</li></ul>	<ul style="list-style-type: none"><li>• The door(s) is(are) open.</li><li>• The plug is not fitted into the wall socket.</li><li>• There is no electricity supply from the wall socket.</li><li>• The selector dial is not set correctly.</li><li>• The water reservoir is full or not correctly inserted (light  is on). The programme starts in any case but it stops after approx. 4 minutes.</li><li>• The start button  has not been depressed.</li><li>• The DELAYED START option has been selected.</li></ul>
<ul style="list-style-type: none"><li>• The dryer does not dry properly:</li></ul>	<ul style="list-style-type: none"><li>• The filters are clogged.</li><li>• The condenser is clogged.</li><li>• The water reservoir is full.</li><li>• The selected cycle is not suitable for the laundry.</li><li>• Insufficient drying time.</li><li>• The laundry has not been spun properly.</li><li>• The low temperature function  has been selected.</li><li>• Excessive laundry load.</li><li>• The dryer is not correctly installed.</li></ul>

If, after the above checks, there is still a fault, call your local Service Centre.

Please make sure you give the model and serial number of the appliance.

This information can be found on the rating plate (see picture on page 4).

 **From the Electrolux Group. The world's No. 1 choice.**

*The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. 14 billion USD in more than 150 countries around the world.*